 


CH-DVD 300 Quick Setup Guide


1 Connect the DVD Player to your TV

- Use the AV (Audio/Video) cable provided to connect the DVD player to your TV as shown in the diagram.
- Your TV must be equipped with AV inputs like those pictured to the right in order to connect this unit.
- If your TV does not have AV inputs, you will need a *RF Modulator* to connect this player to your TV's antenna/cable input. RF Modulators are available at major electronics retailers.

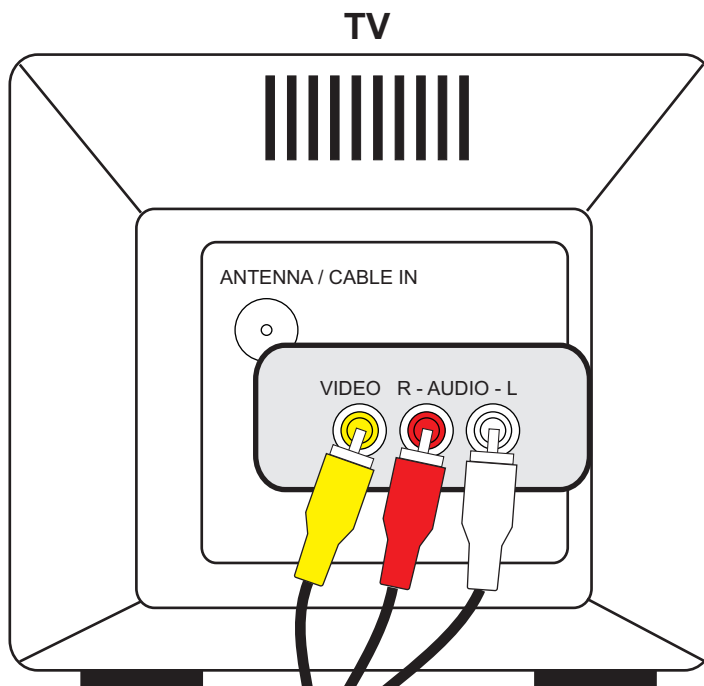


2 Plug-in the Power Cord

- Plug the DVD player's electrical plug into a wall socket or power strip.

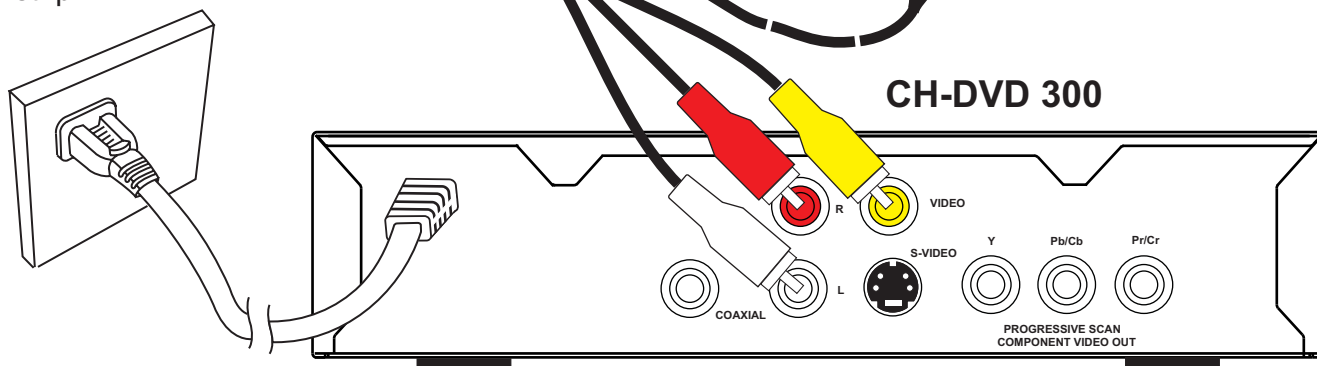

3 Turn on the DVD Player and your TV

- Press the POWER BUTTON on the front panel to turn the DVD player on. The POWER LED should now change from RED (STANDBY MODE) to GREEN (ON).

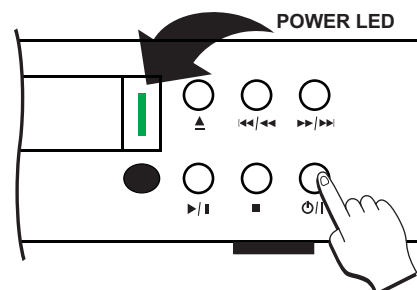

4 Select the VIDEO INPUT on your TV

- The goal is to see the DVD player's splash screen on your TV. To do this, select the Video Input channel on your TV that corresponds with the input the player is plugged into. This procedure differs among TVs, but is normally done by pressing the VIDEO IN or INPUT button on the TV's remote control to select the Video Input.
- When the DVD player's splash screen appears on your TV, you're ready to go!

